



ERM-DAU-277 Active Circuit Transmitter

Installation



The ERM-DAU-277 Active circuit transmitter should be installed by a qualified installer or electrician.

Follow all electrical codes applicable in the location of installation.

The ERM-DAU-277 should be installed in parallel with a load (light, range hood, etc), or directly from a switched circuit. The black wire should be wired to the Hot (120-277V) conductor and white should be wired to Neutral (white). The orange wire is the antenna, and therefore should not be cut or connected to anything.

Specifications

Power Supply	120-277VAC, 50/60Hz
Power Consumption	1.0 W

Radio Frequency	902MHz
Transmission Range	24m (80ft) indoor, 100m (330ft) line of sight

Weight	56.7g (2oz)
Dimensions	55.6 x 37.7 x 25.5 mm (2.2 x 1.5 x 1.0")

Agency Listing and Compliance	
ETL Listed Component Conforms to UL Standard 508 Certified to CAN/CSA Std. C22.2 No.14	
FCC Part 15.231 - Remote Control Transmitter IC RSS -210	

